



● Thank you for purchasing **RPM signal adapter** . before operating the unit, please read the instruction thoroughly and retain it for the future reference.

## Notice

- THE LCD meter is apply for DC 12V
- For installation, please follow the steps described in manual. Any damage caused by wrong installation shall be imputed to the users.
- Don't break or modify the wire terminal. To avoid the short circuit, please don't pull the wire when installing.
- Do not disassemble or change any parts excluding the manual description.
- The interior examination or maintenance should be executed by our professionals.

## MARK MEANING:



**NOTE** You could get the installation details from the information behind the mark.

▲ Some processes must be followed to avoid the affection caused by wrong installation.

▲ **WARNING!** Some processes must be followed to avoid damages to yourself or the public.


▲ **CAUTION!** Some processes must be followed to avoid the damage to the vehicle.

## 1-1 Accessory

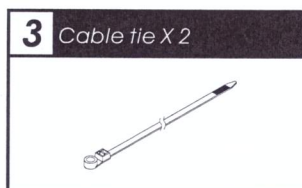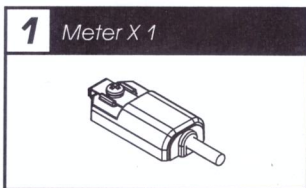

**NOTE** Please contact the local distributor if the items you open are not the same, with the above-listed one.

## 2-1 Wiring installation instructions

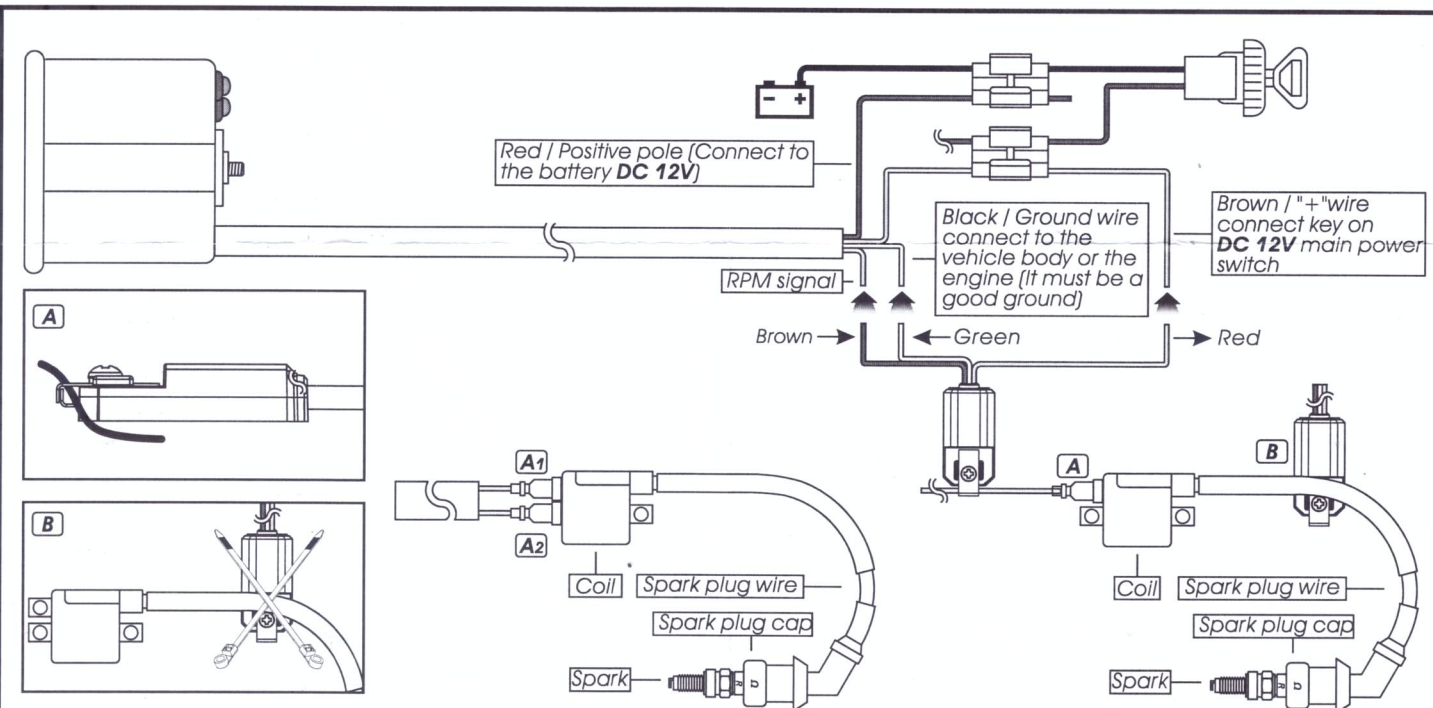

▲ 1. Before installing the RPM signal adapter, please change the meter setting to "HI"


There are 2 positions to install the RPM signal adapter, please check the information below for your reference.

A. The coil signal: Please loosen the screw on the RPM signal adapter and take the clip out. Then put the RPM sensor wire in the clip and then tighten the screw. (There are 2 poles on the coil, so please try both sides to see which pole will work. If you can't get the correct signal from the coil, please try the B method.)

※ When install the RPM signal adapter on the coil, please keep the RPM signal adapter away from the coil to avoid noise.

B. The ignition cable : put the RPM signal adapter on the ignition cable and then use the cable tie to fix it.

## 3-1 Function, setting instruction

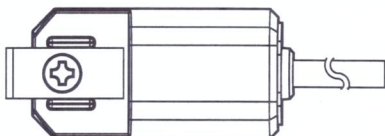

- Effective voltage DC 12 V
- Effective temperature range -10 ~ +60°C
- Meter standard JIS D 5601
- Meter size (W X L X H) 30 X 50 X 24 mm
- Meter weight 約 53g

**NOTE** Design and specification are subject to change without notice!